



Poly Last™ Feed Plate Cover for Case IH 820

Tools Needed


1. Rivet Gun
2. Hand Drill
3. Wire Brush
4. Measuring Tape

Your Poly Last Kit should contain the following:

1. 4 or 5 Poly Last™ Panels to cover the length of your head.
Use the enclosed assembly sketch to properly locate each panel by part number.
2. Two special drill bits.
3. Hardware and Poly Last™ Hold Down Strip.

Installation

1. Clean all crop residue from the steel feed plates.
2. Locate the centerline of your combine head and mark with a large felt tip marker. All assembly will be from the centerline of the combine head.
3. Study the assembly sketch on the next page. Unpack all plastic panels and lay them on top of the header feed plates by part number and according to the assembly sketch.
4. Starting with the center panel fit the front edge of the Poly Last™ cover along the front edge of the feed plate :

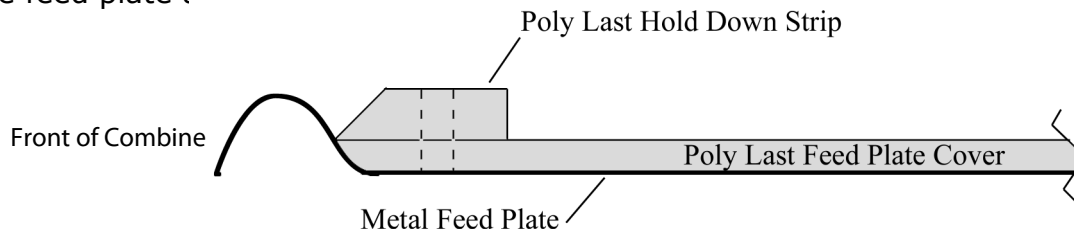


5. With Poly Last™ cover properly aligned clamp it in place and drill the metal feed plate to match the predrilled hole in the Poly Last™ cover. Install supplied rivets.
6. Working from the center out to each edge, rivet the Poly Last™ cover to the feed plate.
7. Install the remaining panels in the same manner per assembly sketch.


Questions or comments? Call us toll free in the US and Canada at 1-800-542-7659

Poly Last™ Feed Plate Cover for Case IH 820

Assembly sketch

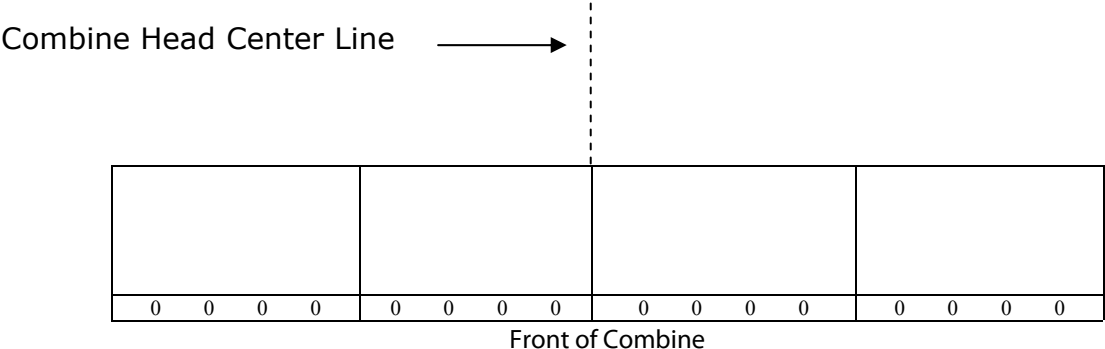

Part# 13ft.	(8130A)	(8130B)	(8130C)	(8130D)
Part# 15ft.	(8150A)	(8150B)	(8150C)	(8150D)
Part# 16 ½'	(8165A)	(8165B)	(8165C)	(8165D)
Part# 17 ½'	(8175A)	(8175B)	(8175C)	(8175D)

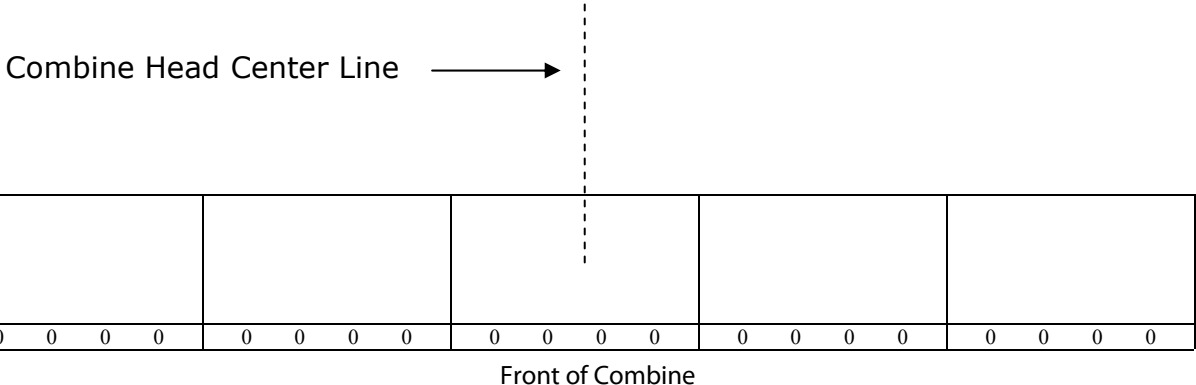

Part# 20ft.	(8200A)	(8200B)	(8200C)	(8200D)	(8200E)
Part# 22.5ft.	(8225A)	(8225B)	(8225C)	(8225D)	(8225E)

Questions or comments? Call us toll free in the US and Canada at 1-800-542-7659