



## INSTALLATION INSTRUCTIONS


### Poly Last™ Combine Skid Cover

**CONGRATULATIONS** – You have purchased the most advanced plastic combine skid cover on the agricultural market. Proper installation will insure your complete satisfaction.

**When using tools, basic safety precautions should always be followed to reduce the risk of personal injury.**

**WEAR SAFETY GLASSES OR GOGGLES**

#### PLEASE READ THESE HELPFUL HINTS BEFORE INSTALLATION

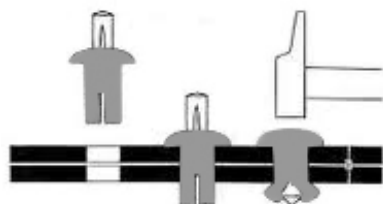

#### Hammer Rivet

- Insert Rivet
- Seat Head firmly against outer surface
- Drive pin flush with rivet head

| TEMPERATURE INFORMATION  |
|--|
| <p><b><u>VERY IMPORTANT</u></b></p> <p>INSTALLATION OF YOUR Poly Last Combine Skid Cover Set should be within a temperature range of 60°F to 85°F.</p> |

- Clean metal skids with wire brush
- Identify and lay out Poly Last™ covers under the corresponding steel covers
- Check packing list to be sure all parts are included
- Start with a small panel first so you can get the feel of how to make a good fit.
- Beginning at the leading edge under the cutter bar, fit the Poly Last™ cover on the steel
- Install rivets along the front of the panel
- Once all rivets have been installed, move on to the next panel.
- Using the same procedure as above install the remainder of your panels.
  - Locate Panel
  - Rivet
  - Always work from Front to Back